Basic bike maintenance



More information

For more information on basic bike maintenance, including maps of your local area, check out our website at

www.yourmove.org.au

The information in this brochure is provided in good faith, however the accuracy or appropriateness of the information is not guaranteed.

Published by the Departments of Transport and Sport and Recreation for Your Move – Get Active Your Way. February 2015.

Printed on recycled paper.







Tune up your treadly

A well-maintained bike makes for a safer, easier and more enjoyable ride.

Follow these handy tips to keep your bike in good working order:

- A new bike will need a few adjustments before it's set up correctly. Most bike shops suggest going back after a month to have the components rechecked.
- We suggest carrying a basic toolkit and puncture repair kit. You can buy compact kits with allen keys and screwdriver heads from bike shops.

- Before riding at night, make sure your front and back lights are working and bright enough to be visible.
- Visit or call your local bike shop for advice on basic maintenance and servicing.



- Check your tyres weekly for splitting and wear, and ensure there is enough air in them. Make sure the tyre pressure is between the minimum and maximum pressure recommended on the side of each tyre.
- Check monthly that your brakes work and that the cables are not fraying. Brake pads need to touch the wheel's metal rim. If they hit the tyre it will make the pads inefficient.
- Check your wheel spokes are not loose and that the rims are straight. If the rims are buckled to the point that they touch the brake pads, you will need to get them straightened at a bike shop.
- Apply lubricant to your bike components, avoiding the wheel rims. Clean and lubricate the chain so it runs quietly and freely.
- Keep your bike out of the rain to avoid rust.

Bike Components:



Puncture repair

If your bike tyre goes flat, don't automatically assume it is punctured - especially if the leak is slow. Rotate the wheel until the valve is at the top and then submerge the valve in a glass of water. If bubbles form, replace the valve.

If the problem is a puncture, here is the recommended way to repair it:

- Release brake callipers and remove wheel by unbolting it, or loosening quick release levers. Rear wheels are easier to remove if the chain is on the smallest gear at both the chain wheel and the cogset.
- Remove the tyre by fully deflating the tyre, then carefully prising it off with tyre levers, or by squeezing the tyre into the rim's well and peeling it off at the opposite point of the rim.
- 3. **Remove tube,** then check around inside of the tyre. If the sharp object that caused the puncture is still there, remove it. If puncture is on inside of the tube, check rim of the wheel and the rim tape for sharp edges.



- 4. **Check the tube for a hole.** Do this by pumping it up and holding it underwater while looking for bubbles, or listen and feel for escaping air. Mark the hole.
- Roughen the area around the hole using sandpaper or scratcher. Spread glue thinly on the tube, wait till it is tacky, position patch over the marked hole and hold firmly for 30 secs (new glueless patches are faster).
- Pump up the tube slightly. Slip one edge of tyre
 into the rim. Push the tube's valve into the rim's hole.
 Then, starting from the valve, push the tube inside the
 tyre. Make sure valve stem is upright and the tube isn't
 twisted.
- 7. Place the second edge of the tyre onto the rim. (75% of the tyre will go on easily, gently ease the rest onto the rim). For stubborn tyres, use a tyre lever to force the tyre on, making sure not to pinch the tube.
- 8. **Pump a bit more air into the tube** to check that it isn't caught and the tyre is properly seated on the rim. Once satisfied, you can inflate the tyre fully.

Top tip: For nifty videos with step-by-step instructions on how to fix your bike, go to www.yourmove.org.au